


SureLock™

OEM Wavelength Stabilized Laser

Coherent's Raman OEM Lasers are wavelength-stabilized, high-power, compact laser modules available in both free-space and fiber-coupled outputs designed specifically for incorporation into Raman spectroscopy systems. The ultracompact electronics provide constant temperature control, along with variable analog current control and an interlock connection to facilitate straightforward integration. The included base plate allows for flexible mounting in virtually any orientation.

All SureLock™ Series lasers feature the PowerLocker® Volume Holographic Grating (VHG) for precise, ultra-stable center wavelengths and narrow spectral bandwidth. This technology minimizes wavelength shifts due to temperature changes, ensuring consistent optical performance across the entire power range from 0% to 100%, making these lasers highly reliable for demanding applications. The narrowed spectral bandwidth, low power consumption, and broad operating temperature characteristics deliver affordable portable instrument quality performance.

Wavelength options cover a wide wavelength range and standard units come with an FC/PC connector. Customization options are available to meet specific customer requirements.

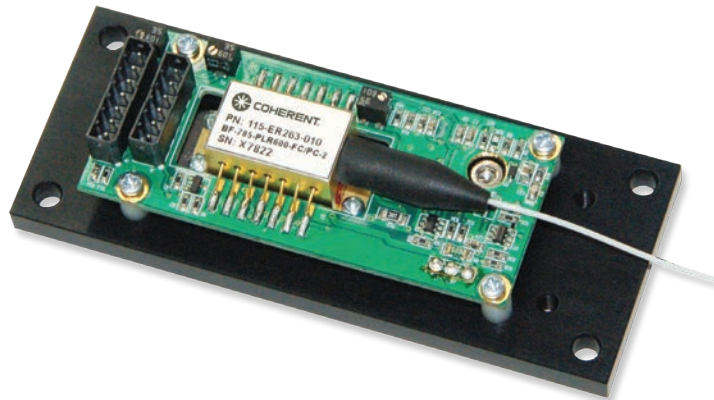

FEATURES

- Ultra-compact design, marginally larger than the 14-pin butterfly laser, with custom mounting options available
- Using standard 0.22NA 105 μm multimode fiber delivering up to 600mW for robust Raman signal generation
- Exceptionally narrow spectral bandwidth, <0.15 nm, ideal for high-resolution Raman spectroscopy
- Superior wavelength stability, maintaining <0.010 nm variation across the full operating temperature range to ensure consistent performance
- Availability of custom wavelengths and tolerances to meet specific Raman application needs
- Options for free-space optical output, allowing flexible system design and integration
- Different electronic interconnect alternatives available to accommodate system requirements and simplifications in assembly

APPLICATIONS

- Raman Spectroscopy
- Metrology
- Bioinstrumentation
- Sensing
- Analytical Instrumentation


Specifications	638 nm	785 nm	830 nm	1064 nm
SKU	115-81060-022	115-81060-010	115-81060-011	115-81060-013
Output Power (mW) (maximum)	250	600	600	600
Center Wavelength (nm)				
Minimum	637.5	784.5	829.5	1063.5
Typical	638	785	830	1064
Maximum	638.5	785.5	830.5	1064.5
Spectral Bandwidth (FWHM nm)				
Typical	0.07	0.08	0.08	0.09
Maximum	0.15	0.15	0.15	0.15
Spectral Bandwidth (FWHM cm ⁻¹)				
Typical	1.7	1.2	1.2	0.8
Maximum	3.7	2.4	2.2	1.3
Side Mode Suppression Ratio (dB)	Minimum 40			
Temperature Setpoint ¹ (°C)	Typical 25 Minimum 40			
Stabilized Temperature ¹ (°C)	Minimum 10			
Fiber Type ² (standard)	FC/ PC > 1m 0.22NA / 105 μm core / 900 μm tubing			
Operating Requirements				
Current (mA) (maximum)	Typical 1.3 Maximum 3			
Input Voltage (V) (typical)	5			
Operating Temperature ³ (°C)	Minimum 0 Typical 25 Maximum 40			
Storage Temperature ³ (°C)	Minimum -20 Maximum 80			

All specifications are at rated power with a case temperature of 25°C unless otherwise noted. Wavelengths specified are vacuum referenced. Ex: 632.991nm vacuum referenced is equivalent to 632.816nm standard air referenced for HeNe.

1. Temperature set point is internal TEC set point. R-T thermistor data is available to determine actual thermistor setting.
2. Free space option available. Please contact sales for options.
3. Non-condensing.

Typical Performance Data

Optical Performance Stability (sample)

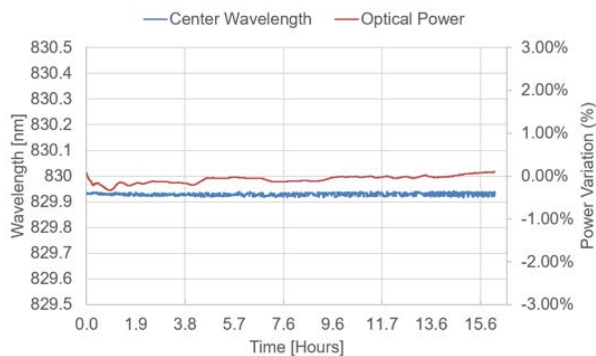

Optical Spectrum (sample)

